


# Install NVMe (Hardware)



## How to Setup NVMe Guide

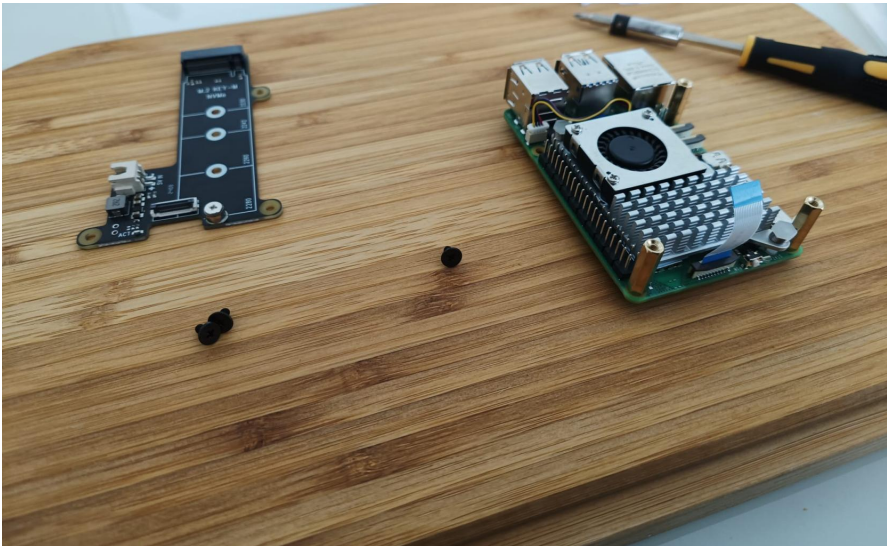

1.

First install the standoffs and

screw them on the bottom of the Pi.

2. Then Mount the NVMe Base on the standoffs  
and click in the SSD,



3. Then you need to install the Thermal Pad on top of the NVMe.



You DONT need to remove the Informationsticker from the SSD.  
In case you did, you will remove your Warranty.

4. On the last Step you need to remove the Blue Sticker and install the cooler on Top of the Thermalpad.



---

Revision #14

Created 25 August 2024 16:03:45 by aeoneros

Updated 9 September 2024 09:18:19 by aeoneros